

FURNITURE

Purpose

This document outlines the procedures to adjust a recliner mechanism to prevent it from striking the chair's base (Fig. 1). The addition of one to three flat washers to elevate a section of the base helps the mechanism operate smoothly.

Safety

CAUTION

Moving parts can pinch, crush or cut. Keep clear and use caution.

Resources Required

- Cordless or electric drill or screw gun or socket wrench
- 7/16" socket
- One to three 5/16" flat washers

Procedure

1. Place cloth or other clean, dry material on the floor to protect the recliner.
2. Turn the recliner on its side.
3. Using a 7/16" socket, remove the second screw from the top of the base (Fig. 2). The screw is holding in place a crosspiece of the base and is fastened through the inside foot on the front of the recliner.

Fig. 1




Mechanism Striking Base

Outside Foot

Front of Recliner Base

Fig. 2

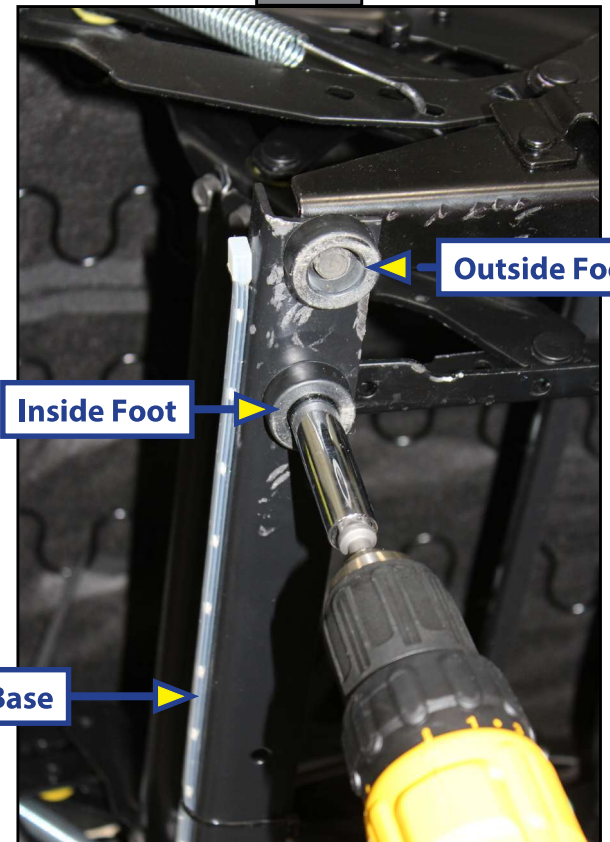

Outside Foot

Inside Foot

FURNITURE

4. Pull the metal crosspiece away from the screw and install one to three flat washers on the end of the screw (Fig. 3).


NOTE: It may require some experimentation to determine the number of washers necessary to allow the recliner mechanism to move freely.

Fig. 3



5. Refasten the screw into the threads of the crosspiece (Fig. 4).
6. Place the recliner upright and test the movement to ensure the mechanism is not striking the base of the chair.

Fig. 4

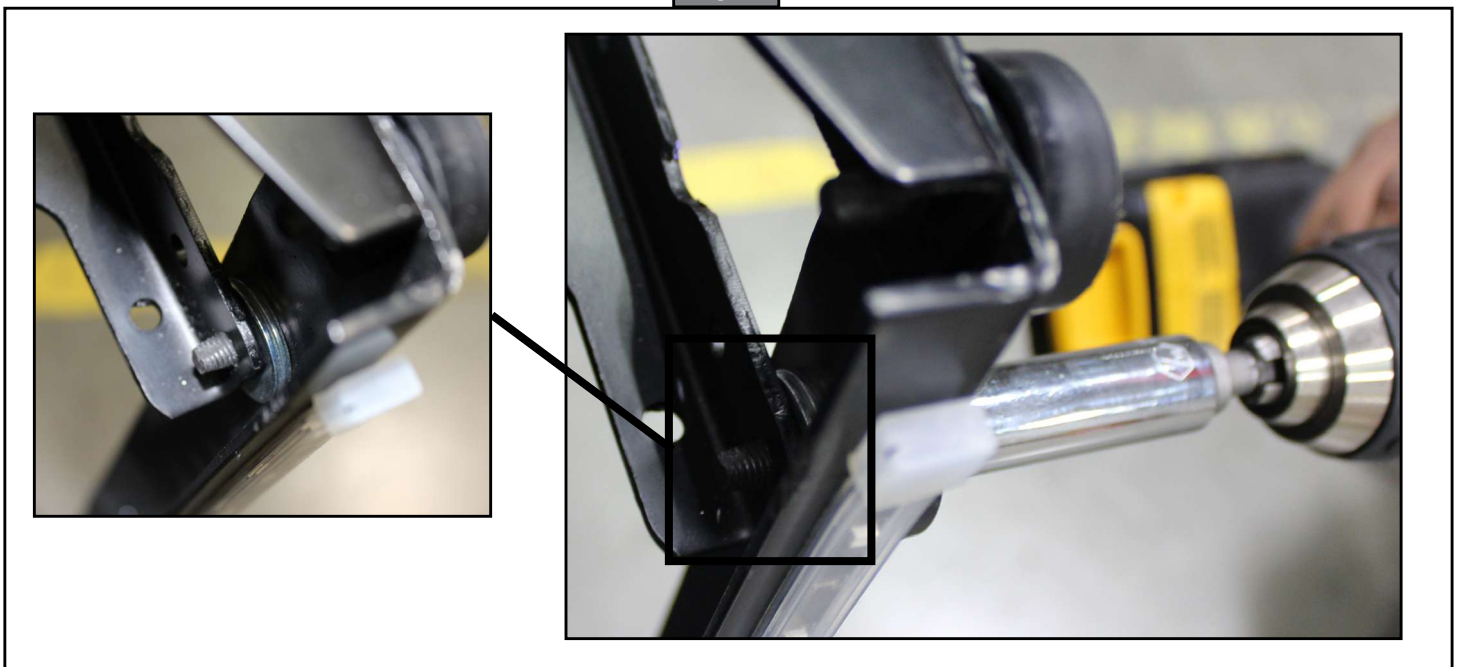

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.